

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
CANON	7.4V	BP-2L12	LI12, LI38		Adapter Plate E
CANON		BP-2L13			Adapter Plate E
CANON		BP-2L14	LI38	23-489	Adapter Plate E
CANON	3.6V	BP-308	LI88		Adapter Plate E
CANON		BP-315	LI88		Adapter Plate E
CANON		BP-3LCL			Adapter Plate E
CANON	7.4V	BP-406	LI21		Adapter Plate E
CANON	740mAh	BP-407			Adapter Plate E
CANON	7.4V	BP-412	LI21		Adapter Plate E
CANON	7.4V	BP-422	LI21		Adapter Plate E
CANON	7.2V	BP-511	LI36, LI37	23-607	Base unit
CANON	7.2V	BP-512	LI36, LI37		Base unit
CANON	7.2V	BP-522	LI36, LI37		Base unit
CANON	7.2V	BP-535	LI36, LI37		Base unit
CANON	7.2V	BP-608	LI20		Adapter Plate A
CANON	7.2V	BP-617	LI20		Adapter Plate A
CANON	7.2V	BP-911	LI25		Base unit
CANON	7.2V	BP-914	LI25		Base unit
CANON	7.2V	BP-915	LI25		Base unit
CANON	7.2V	BP-924	LI35		Base unit
CANON		BP-925	LI25, LI35		Base unit
CANON	7.2V	BP-927	LI35		Base unit
CANON	7.2V	BP-930	LI35		Base unit
CANON	7.2V	BP-941	LI25		Base unit
CANON	7.2V	BP-945	LI35		Base unit
CANON	3.7V	NB-1L	LI17		Adapter Plate E
CANON	7.4V	NB-1LH		23-488	Adapter Plate E
CANON	7.4V	NB-2L	LI12		Adapter Plate E
CANON		NB-2L12			Adapter Plate E
CANON	7.4V	NB-2LH	LI81	23-489	Adapter Plate E
CANON	3.7V	NB-3L	LI11		Adapter Plate E
CANON	3.7V	NB-4L	LI34	23-486	Adapter Plate E
CANON	3.7V	NB-5L	LI52		Adapter Plate E
CASIO	3.6V	NP-20			Adapter Plate E
CASIO	3.7V	NP-30		23-485	Adapter Plate E
CASIO		NP-40			Adapter Plate E
CASIO		NP-50			Adapter Plate E
DIGITAL		CB-120			Adapter Plate B
FUJI	3.7V	DR-LB4			Adapter Plate E
FUJI	3.6V	NP-100			Adapter Plate E
FUJI	7.2V	NP-120			Adapter Plate E
FUJI		NP-150			Adapter Plate E
FUJI		NP-30			Adapter Plate E
FUJI	3.6V	NP-40		23-484	Adapter Plate E
FUJI		NP-40N	LI26		Adapter Plate E
FUJI	3.7V	NP-45	LI83		Adapter Plate E
FUJI		NP-50	LI79		Adapter Plate E
FUJI	3.6V	NP-60		23-485	Adapter Plate E
FUJI		NP-70			Adapter Plate E
FUJI	3.7V	NP-80	LI15		Adapter Plate E
FUJI	3.6v / 1800mAh	NP-95	LI33		Adapter Plate E

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
GPI	3.7V/740mAh	VCL011			Adapter Plate E
GPI	3.7V/1070mAh	VFL001			Adapter Plate E
GPI	3.7V/850mAh	VKL001			Adapter Plate E
GPI	3.7V/950mAh	VNL002			Adapter Plate E
GPI	7.4V/1400mAh	VNL004			Adapter Plate E
hama	7.4V	CP846			Adapter Plate E
HITACHI		DZ-BP14S			Adapter Plate E
HITACHI	7.2V / 2040mAh	DZ-BP21S			Adapter Plate E
HITACHI		DZ-BP7S			Adapter Plate E
HITACHI	7.2V	VM-BPL13			Base unit
HITACHI	7.2V	VM-BPL27			Base unit
HITACHI	7.2V	VM-BPL30			Base unit
HITACHI	7.2V	VM-BPL60			Base unit
HITACHI	7.2V	VM-E330			Base unit
HITACHI	7.2V	VM-E535			Base unit
HITACHI	7.2V	VM-N520			Base unit
HITACHI	7.2V	VM-NP500			Base unit
HP	3.6V	R07	LI19		Adapter Plate E
JVC	7.2V	BN-507	LI48		Adapter plate C
JVC	7.2V	BN-514	LI48		Adapter plate C
JVC	3.7V	BN-V101			Adapter Plate E
JVC	7.4V	BN-V107	LI46		Adapter plate D
JVC	7.4V	BN-V114	LI46		Adapter plate D
JVC	7.2V	BN-V207			Adapter plate C
JVC	7.2V	BN-V214			Adapter plate C
JVC	7.2V	BN-V306			Adapter Plate E
JVC	7.2V	BN-V312U			Adapter Plate E
JVC	7.2V	BN-V408	LI47		Base unit
JVC	7.2V	BN-V416	LI47		Base unit
JVC	7.2V	BN-V418	LI47		Base Unit
JVC	7.2V	BN-V428	LI47		Base unit
JVC		BN-V507	LI48		Adapter plate C
JVC		BN-V514	LI48		Adapter plate C
JVC	7.2V	BN-V607	LI40		Adapter plate B
JVC	7.2V	BN-V615	LI40		Adapter plate B
JVC	7.2V	BN-V628	LI40		Adapter plate B
JVC		BN-V707	LI50		Adapter Plate E
JVC		BN-V707U			Adapter Plate E
JVC	3.6V	BN-V712			Adapter plate A
JVC	3.6V	BN-V714			Adapter plate A
JVC	7.2V	BN-V812	LI45		Base unit
JVC	7.2V	BN-V814	LI45		Base unit
JVC		BN-V840	LI45		Base unit
JVC		BN-V856	LI45		Base unit
JVC	7.2V	BN-V907			Adapter plate B
JVC		BN-VF707			Adapter Plate E
JVC		J-I723			Adapter plate B

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
KODAK	3.7V	KLIC-3000	LI15		Adapter Plate E
KODAK	3.7V	KLIC-5000	LI19		Adapter Plate E
KODAK	3.7V / 730mAh	KLIC7000			Adapter Plate E
KODAK	3.7V	KLIC7001			Adapter Plate E
KODAK	3.7V	KLIC7002			Adapter Plate E
KODAK	3.7V / 1050mAh	KLIC7003			Adapter Plate E
KODAK		KLIC7004	LI79		Adapter Plate E
KODAK		KLIC7005			Adapter Plate E
KODAK		KLIC7006			Adapter Plate E
KODAK	3.7V	KLIC8000			Adapter Plate E
KONICA MINOLTA		DR-LB1			Adapter Plate E
KONICA MINOLTA	3.7V	DR-LB4			Adapter Plate E
KONICA MINOLTA		NP-1			Adapter Plate E
KONICA MINOLTA	3.7V	NP-200	LI29		Adapter Plate E
KONICA MINOLTA	3.7V / 870mAh	NP-500			Adapter Plate E
KONICA MINOLTA	3.7V / 860mAh	NP-600			Adapter Plate E
KONICA MINOLTA	3.7V / 660mAh	NP-700			Adapter Plate E
KONICA MINOLTA	7.4V / 800mAh	NP-800	LI14		Adapter Plate E
KONICA MINOLTA		NP-900			Adapter Plate E
KYOCERA	3.6V	BP-1000S			Adapter Plate E
KYOCERA		BP-1100S			Adapter Plate E
KYOCERA	3.7V-780mAh	BP-780S			Adapter Plate E
KYOCERA	3.6V	BP-800S			Adapter Plate E
NIKON	7.4V	EN-EL1	LI14	23-491	Adapter Plate E
NIKON	3.6V	EN-EL10	LI51		Adapter Plate E
NIKON	3.6V	EN-EL11			Adapter Plate E
NIKON	3.7V	EN-EL2	LI16		Adapter Plate E
NIKON	7.4V	EN-EL3	LI13	23-490	Adapter Plate E
NIKON	3.6V	EN-EL3E	LI13E		Adapter Plate E
NIKON		EN-EL5			Adapter Plate E
NIKON		EN-EL7			Adapter Plate E
NIKON		EN-EL8	LI09		Adapter Plate E
NIKON	3.6V	EN-EL9			Adapter Plate E
OLYMPUS	3.7V	LI-10B	LI10		Adapter Plate E
OLYMPUS		LI-12B	LI10		Adapter Plate E
OLYMPUS		LI-20B	LI19	23-485	Adapter Plate E
OLYMPUS		LI-30B			Adapter Plate E
OLYMPUS		LI-40B	LI83		Adapter Plate E
OLYMPUS	3.7V / 740mAh	LI-42B	LI51	23-484	Adapter Plate E
OLYMPUS		LI-50B			Adapter Plate E
OLYMPUS	7.2V / 1500mAh	PS-BLM1	LI31		Adapter Plate E
OLYMPUS		PS-BLS1	LI31		Adapter Plate E

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
OPTEX	7.2V	LI20			Adapter plate A
OPTEX	7.4V	LI21			Adapter plate D
OPTEX	7.2V	LI25			Base unit
OPTEX	7.2V	LI35			Base unit
OPTEX	7.2V	LI36			Base unit
OPTEX	7.2V	LI37			Base unit
OPTEX	7.2V	LI40			Adapter plate B
OPTEX	7.2V	LI42			Adapter plate B
OPTEX	7.2V	LI44			Adapter Plate B
OPTEX	7.2V	LI45			Base unit
OPTEX	7.4V	LI46			Adapter plate D
OPTEX	7.2V	LI47			Base unit
OPTEX	7.2V	LI53			Base unit
OPTEX	7.2V	LI54			Base unit
OPTEX	7.2V	LI56			Base unit
OPTEX	7.2V	LI56M			Base unit
OPTEX	3.6V	LI57			Adapter plate B
OPTEX	7.2V	LI58			Base unit
OPTEX	3.7V	LI59			Base unit
OPTEX	7.4V	LI60			Base unit
PANASONIC		AG-BP15P			Base unit
PANASONIC	7.2V	AG-BP15P			Adapter Plate E
PANASONIC		AG-BP25			Base unit
PANASONIC	7.2V	AG-BP25			Adapter Plate E
PANASONIC		CGA-D414A1B			Adapter Plate E
PANASONIC		CGA-D421A1B			Adapter Plate E
PANASONIC	7.2V	CGA-DU07	LI27		Adapter Plate E
PANASONIC	7.2V	CGA-DU14	LI27		Adapter Plate E
PANASONIC	7.2V	CGA-DU21	LI27		Adapter Plate E
PANASONIC	3.7V	CGA-S001E			Adapter Plate E
PANASONIC	3.7V	CGA-S002	LI41		Adapter Plate E
PANASONIC		CGA-S004			Adapter Plate E
PANASONIC	3.7V	CGA-S005	LI43		Adapter Plate E
PANASONIC		CGA-S006E			Adapter Plate E
PANASONIC		CGA-S007	LI69		Adapter Plate E
PANASONIC		CGA-S007A/1B	LI69		Adapter Plate E
PANASONIC	3.7V	CGA-S008	LI74		Adapter Plate E
PANASONIC	3.7V-1035mAh	CGA-S301			Adapter Plate E
PANASONIC	7.2V	CGP-110E			Adapter plate B
PANASONIC	7.2V	CGP-120E			Adapter plate B
PANASONIC	7.2V	CGP-145			Adapter plate B
PANASONIC	7.2V	CGP-165			Adapter plate B
PANASONIC	7.2V	CGP-285			Adapter plate B
PANASONIC	7.2V	CGP-D14			Adapter plate B
PANASONIC	7.2V	CGP-D16			Adapter plate B
PANASONIC	7.2V	CGP-D21			Adapter plate B
PANASONIC	7.2V	CGP-D28			Adapter plate B
PANASONIC	7.2V	CGR-602A			Adapter Plate E
PANASONIC	7.2V	CGR-B202A	LI45		Base unit
PANASONIC	7.2V	CGR-B202A			Adapter Plate E
PANASONIC	7.2V	CGR-D08A	LI42, LI44		Adapter plate B
PANASONIC	7.2V	CGR-D16A	LI42, LI44		Adapter plate B
PANASONIC		CGR-D210			Adapter plate B

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
PANASONIC	7.2V	CGR-D210/D220/D320			Adapter Plate E
PANASONIC	7.2V	CGR-D28A			Adapter plate B
PANASONIC	7.2V	CGR-D53A			Adapter plate B
PANASONIC	7.4V	CGR-S006A/1B	LI77		Adapter Plate E
PANASONIC	3.7V	CGR-S101A			Adapter Plate E
PANASONIC	3.7V	CGR-S301A			Adapter Plate E
PANASONIC	7.2V	CGR-S602E			Adapter Plate E
PANASONIC	7.4V	CGR-S603A/1B	LI73		Adapter Plate E
PANASONIC	7.2V	CGR-S620E			Adapter Plate B
PANASONIC	7.2V	CGR-V14			Adapter Plate B
PANASONIC	7.2V	CGR-V26			Adapter Plate B
PANASONIC	7.2V	CGR-V610			Adapter plate C
PANASONIC	7.2V	CGR-V620E			Adapter plate C
PANASONIC	3.7V	DMW-BC7			Adapter Plate E
PANASONIC	3.6V	DMW-BCA7			Adapter Plate E
PANASONIC		DMW-BCB7			Adapter Plate E
PANASONIC		DMW-BCC12			Adapter Plate E
PANASONIC	3.7V / 1000mAh	DMW-BCD10			Adapter Plate E
PANASONIC	7.4V	DMW-BL14			Adapter Plate E
PANASONIC	7.2V / 1400mAh	DMW-BL14			Adapter Plate E
PANASONIC		DMW-BLA13			Adapter Plate E
PANASONIC	7.2V	DMW-BM7			Adapter Plate E
PANASONIC		DMW-BMA7			Adapter Plate E
PANASONIC	7.2V	PV-BP8	LI42, LI44		Adapter plate B
PANASONIC	7.2V	PV-DBP5			Base unit
PANASONIC	3.7V / 490mAh	RP-BP40L			Adapter Plate E
PANASONIC		RP-BP40L			Adapter Plate E
PANASONIC	3.7V	VW-VBA05			Adapter Plate E
PANASONIC	3.7V	VW-VBA10		23-485	Adapter Plate E
PANASONIC	3.7V	VW-VBD07			Adapter Plate E
PANASONIC	7.2V	VW-VBD1 / E			Adapter Plate E
PANASONIC	7.2V	VW-VBD1 /E	LI45		Base unit
PANASONIC	3.7V	VW-VBD14			Adapter Plate E
PANASONIC	7.2V	VW-VBD2			Base unit
PANASONIC	7.2V	VW-VBD2			Adapter Plate E
PANASONIC	7.2V	VW-VBD21			Adapter Plate E
PANASONIC	7.2V	VW-VBD23			Adapter Plate E
PANASONIC	7.2V	VW-VBD23	LI42, LI44		Adapter plate B
PANASONIC	7.2V	VW-VBD24			Adapter Plate E
PANASONIC	7.2V	VW-VBD24			Adapter plate B
PENTAX		D-L8			Adapter Plate E
PENTAX	3.7V	D-L12	LI19		Adapter Plate E
PENTAX	3.7V	D-L17			Adapter Plate E
PENTAX	3.7V	D-L18	LI26		Adapter Plate E
PENTAX		D-LI172			Adapter Plate E
PENTAX		D-LI63	LI51		Adapter Plate E
PENTAX	3.7V	D-LI68	LI79		Adapter Plate E
PENTAX		D-LI78			Adapter Plate E
POLAROID	3.6V	PR111DG			Adapter Plate E
RCA	7.2V	BB-065L			Base unit
RCA	7.2V	BB-075			Adapter plate A
RCA	7.2V	BB-075L			Adapter plate A

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
RICOH	3.7	DB-30			Adapter Plate E
RICOH	3.7	DB-40			Adapter Plate E
RICOH	3.7	DB-43			Adapter Plate E
RICOH		DB-50			Adapter Plate E
RICOH		DB-60			Adapter Plate E
SAMSUNG	7.4V	SB-L110 / L220			Adapter Plate E
SAMSUNG	7.4V	SB-L160	LI60	23-9100	Base unit
SAMSUNG	7.4V	SB-L160/L320/L480			Adapter Plate E
SAMSUNG	7.4V	SB-L320	LI60	23-9100	Base unit
SAMSUNG	7.4V	SB-L480	LI60	23-9100	Base unit
SAMSUNG	7.4V	SB-L70/L110/L220			Adapter Plate E
SAMSUNG	7.4V	SB-LSM80			Adapter Plate E
SAMSUNG		SLB-0837			Adapter Plate E
SAMSUNG		SLB-1137			Adapter Plate E
SAMSUNG		SLB-1674			Adapter Plate E
SANYO	3.7V	DB-L10		23-496	Adapter Plate E
SANYO	3.7V	DB-L20	LI82		Adapter Plate E
SANYO		DB-L40			Adapter Plate E
SANYO		DB-L50			Adapter Plate E
SANYO	7.2V	VM-LC100			Base unit
SANYO	7.2V	VM-LC100			Adapter Plate E
SHARP	3.6V	AD-S30BT			Adapter Plate E
SHARP	3.6V	AD-S31BT			Adapter Plate E
SHARP	3.6V	AD-T50BT			Adapter Plate E
SHARP	3.6V	AD-T51BT			Adapter Plate E
SHARP	3.6V	BT-L1			Adapter plate A
SHARP	3.6V	BT-L11			Adapter plate A
SHARP	3.6V	BT-L12			Adapter plate A
SHARP	3.6V	BT-L2			Adapter plate A
SHARP	3.6V	BT-L22			Adapter plate A
SHARP	7.2V	BT-L221			Adapter plate B
SHARP		BT-L225U			Adapter Plate E
SHARP	7.2V	BT-L241			Adapter plate B
SHARP	3.6V	BT-L31			Adapter plate C
SHARP	7.2V	BT-L41			Adapter plate B
SHARP	7.2V	BT-L441			Adapter plate B
SHARP		BT-LS222			Adapter plate B
SHARP		BT-LS442			Adapter plate B
SHARP	3.6V	VR-BL71			Adapter plate A
SHARP	3.6V	VR-BL72			Adapter plate C
SHARP	3.6V	VR-BL75			Adapter plate A
SHARP	3.6V	VR-BL81			Adapter Plate E
SHARP	3.6V	VR-BL81			Adapter plate A
SHARP	7.2V	VR-BL91			Adapter plate B
SONY	3.7V	NP-FC10	LI59	23-629	Base unit
SONY	3.7V	NP-FC11	LI59	23-629	Base unit
SONY	7.2V	NP-FF50	LI58		Base unit
SONY	7.2V	NP-FF51	LI58		Base unit
SONY	7.2V	NP-FF70	LI58		Base unit
SONY	7.2V	NP-FF71	LI58		Base unit
SONY	3.7V	LIP-10			Adapter Plate E
SONY		LIP-4WM			Adapter Plate E
SONY		LIP-880PD			Adapter Plate E
SONY	7.2V	NP-500			Base unit

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
SONY	7.2V	NP-500			Adapter Plate E
SONY	7.2V	NP-520			Base unit
SONY	7.2V	NP-520			Adapter Plate E
SONY	3.7V	NP-BD1	LI78		Adapter Plate E
SONY	3.6V	NP-BG1	LI92		Adapter Plate E
SONY	3.6V	NP-F10			Base unit
SONY	3.6V	NP-F10			Adapter Plate E
SONY	7.2V	NP-F100			Base unit
SONY	7.2V	NP-F100			Adapter Plate E
SONY	3.6V	NP-F20			Base unit
SONY	7.2V	NP-F200			Base unit
SONY	3.6V	NP-F200			Adapter Plate E
SONY	3.6V	NP-F30			Base unit
SONY	3.6V	NP-F30			Adapter Plate E
SONY	7.2V	NP-F300			Base unit
SONY	7.2V	NP-F300			Adapter Plate E
SONY	7.2V	NP-F330		23-383	Base unit
SONY	7.2V	NP-F330/F530			Adapter Plate E
SONY	7.2V	NP-F530	LI56		Base unit
SONY	7.2V	NP-F550	LI56	23-383	Base unit
SONY	7.2V	NP-F550			Adapter Plate E
SONY	7.2V	NP-F570	LI56		Base unit
SONY	7.2V	NP-F720	LI56		Base unit
SONY	7.2V	NP-F720/F730			Adapter Plate E
SONY	7.2V	NP-F730	LI56		Base unit
SONY	7.2V	NP-F730			Adapter Plate E
SONY	7.2V	NP-F730H	LI56		Base unit
SONY	7.2V	NP-F750	LI56		Base unit
SONY	7.2V	NP-F750/F750SP			Adapter Plate E
SONY		NP-F750SP			Base unit
SONY	7.2V	NP-F930	LI56		Base unit
SONY	7.2V	NP-F930			Adapter Plate E
SONY	7.2V	NP-F950	LI56		Base unit
SONY	7.2V	NP-F950/F960			Adapter Plate E
SONY	7.2V	NP-F960	LI56		Base unit
SONY		NP-FA50/FA70			Adapter Plate E
SONY	3.7V	NP-FC10			Adapter Plate E
SONY	3.7V	NP-FC11			Adapter Plate E
SONY		NP-FE1			Adapter Plate E
SONY	7.2V	NP-FH30			Base unit
SONY	7.2V	NP-FH40			Base unit
SONY	7.2V	NP-FH50	LI91		Base unit
SONY	7.2V	NP-FH60	LI91		Base unit
SONY	7.2V	NP-FH70	LI91		Base unit
SONY	7.2V	NP-FM50	LI56M	23-630	Base unit
SONY	7.2V	NP-FM50			Adapter Plate E
SONY		NP-FM500H			Base unit
SONY	7.2V	NP-FM70	LI56M		Base unit
SONY	7.2V	NP-FM70			Adapter Plate E
SONY	7.2V	NP-FM90	LI56M		Base unit
SONY	7.2V	NP-FM90			Adapter Plate E
SONY	7.2V	NP-FP50	LI53, LI54		Base unit
SONY	7.2V	NP-FP50			Adapter Plate E
SONY	7.2V	NP-FP70	LI53, LI54		Base unit

OPTEX Li4000

Compatibility List - December 2008

OEM BRAND	VOLTAGE	OEM BATTERY	OPTEX BATTERY	RADIOSHACK	CHARGE BY
SONY	7.2V	NP-FP70			Adapter Plate E
SONY	7.2V	NP-FP90	LI53, LI54		Base unit
SONY	7.2V	NP-FP90			Adapter Plate E
SONY	3.6V	NP-FR1			Adapter Plate E
SONY	3.6V	NP-FS11	LI57		Base unit
SONY	3.6V	NP-FS11			Adapter Plate E
SONY	3.6V	NP-FS21	LI57		Base unit
SONY	3.6V	NP-FS21			Adapter Plate E
SONY	3.6V	NP-FS31	LI57		Base unit
SONY	3.6V	NP-FS31			Adapter Plate E
SONY	3.6V	NP-FT1			Adapter Plate E
SONY	7.2V	NP-QM51	LI56M		Base unit
SONY	7.2V	NP-QM51			Adapter Plate E
SONY	7.2V	NP-QM71	LI56M		Base unit
SONY	7.2V	NP-QM71			Adapter Plate E
SONY	7.2V	NP-QM91	LI56M		Base unit
SONY	7.2V	NP-QM91			Adapter Plate E
THOMSON	7.2V	BAT600			Base unit
TOSHIBA	7.4V / 1200mAh	GSC-BT5			Adapter Plate E
TOSHIBA	3.6V	PDR-BT1			Adapter Plate E
TOSHIBA	3.6V	PDR-BT2			Adapter Plate E
TOSHIBA	3.7V	PDR-BT3			Adapter Plate E
TOSHIBA	3.6V	PDR-BT9			Adapter Plate E
VICTOR	7.2V / 800mAh	BN-VM200			Adapter Plate E